


SCHELL WC-Betätigungsplatte

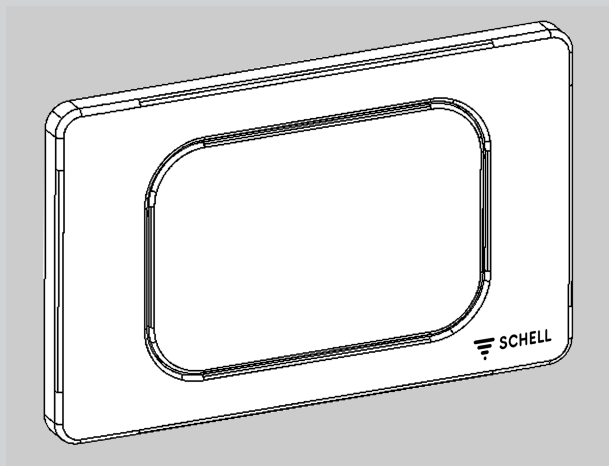

Ⓓ **Montageanleitung WC-Betätigungsplatte**

Funktion: START / STOPP

Art.-Nr. 03 262 28 99

Ⓐ **Montagevoorschrift WC-bedieningsplaat**

Functie: START / STOP

Art.-nr. 03 262 28 99

Ⓕ **Notice de montage**

Plaque de commande pour WC

Fonction: MARCHE / ARRET

Réf. 03 262 28 99











Ⓖ **Assembly instructions for WC-Activation plate, Function: start / stop**

item no. 03 262 28 99

Ⓔ **Instrucciones de Montaje Escudo WC**

Funcion: start / stop

Art. No. 25 03 262 28

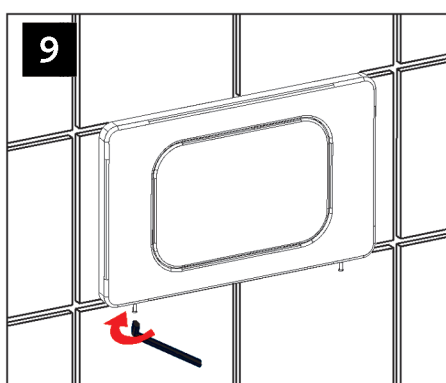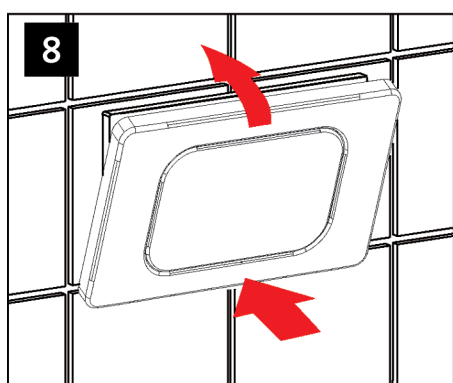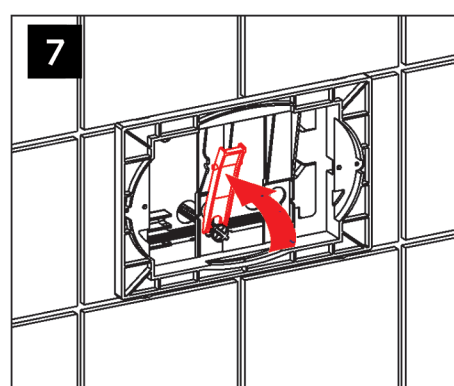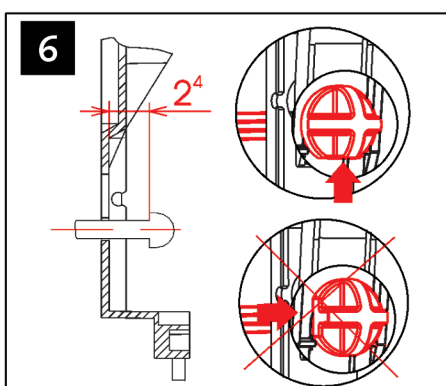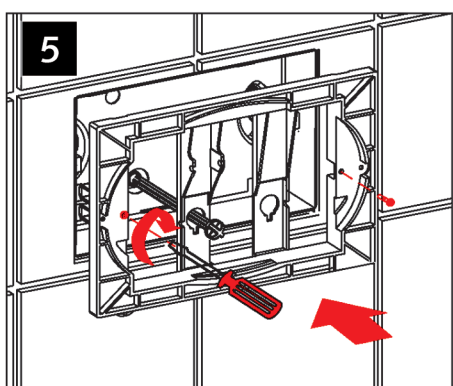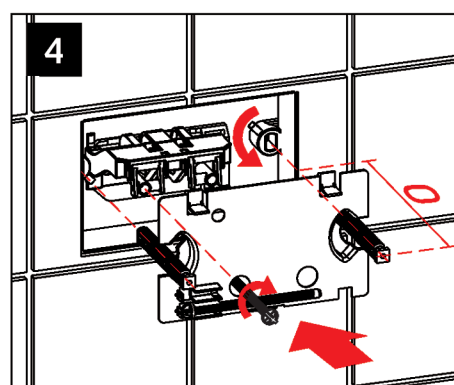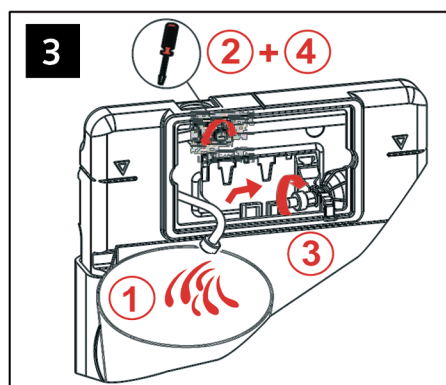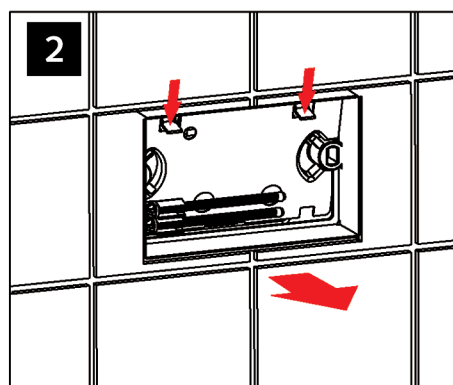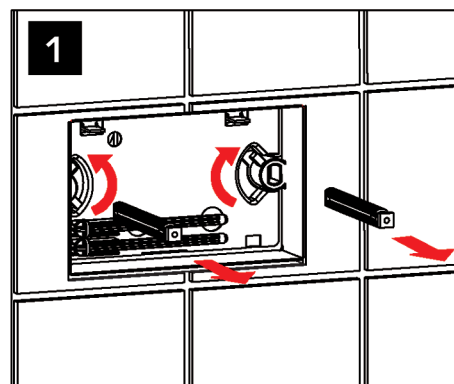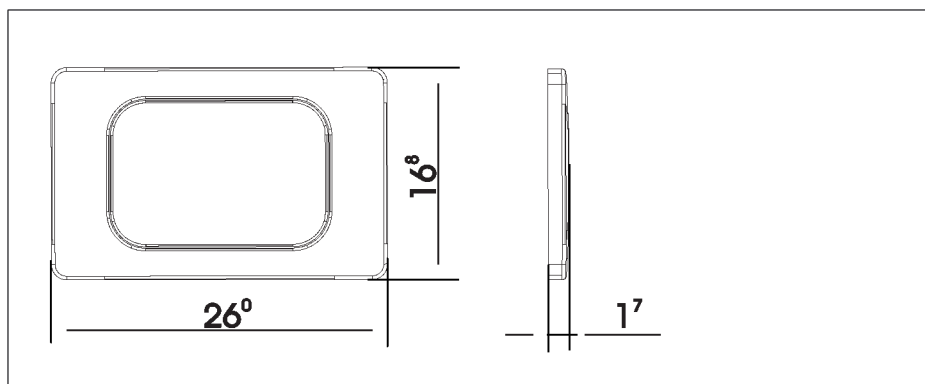

SCHELL GmbH & Co. KG
 Armaturentechnologie
 Postfach 1840
 D-57448 Olpe
 Tel.: ++49 27 61-8 92-0
 Fax: ++49 27 61-8 92-1 99
 info@schell.eu
 www.schell.eu